

Cupola Installation Instructions

- 1 Align the cupola to the universal base
- ② Attach using the 16 color-matched sheet metal screws included with your 16", 24", or 36" cupolas (48" cupolas come pre-assembled)
- ③ Install 4 screws spread evenly apart on each side of the cupola and no less than 2" from the corners

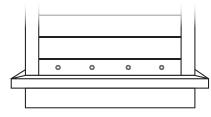


Do not put screws through corner pieces

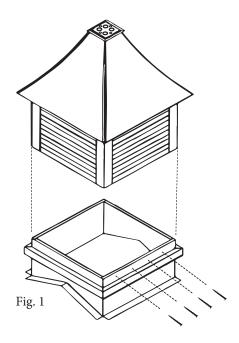

Weathervane Installation Instructions

- Fill ¾" in diameter fastening area of cupola roof cap with 2300 Geocel caulk before fastening weathervane flange base
- ② Mount and screw weathervane flange base to cupola roof cap using the 4 black #12 self-tapping screws included with your cupola
- ③ Discard the nut provided with the weathervane and use the ¼-20 Nylock Locknut provided with the cupola roof cap
- (4) Assemble weathervane mast to flange base as seen in Figure 3. Holding the mast vertically (90°). Firmly tighten nut/bolt

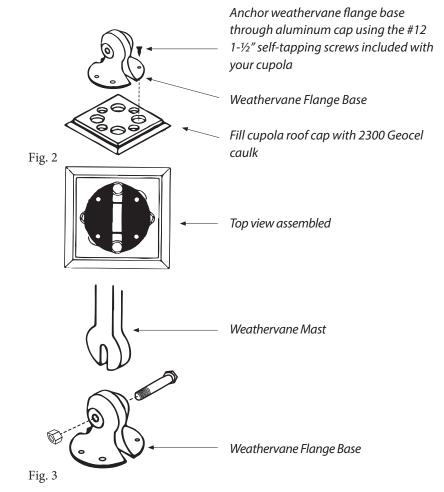

Made from 28 ga unless otherwise requested.

Fully-assembled Cupolas for Fast Installation

48" Cupola comes fully-assembled with base attached.

16", 24", and 36" come fully-assembled in two pieces (Cupola and Base) that simply need to be fastened with 4 screws on each side. (Installation Instructions included with each cupola)

- Four standard sizes: 16", 24", 36", & 48" square
- · Louvered sides are standard
- Pre-assembled for quick installation
- Windows are optional on 36" and 48" cupolas
- · Any base, wall, trim, and roof color combinations
- · Vented or solid weathervane base
- Pre-installed heavy gauge base designed to support the cupola without additional framing or flashing, custom made to match to roof pitch

16" Cupola: 16" x 16" x 25"

Weight: 58 lbs

24" Cupola: 24" x 24" x 36"

Weight: Unknown

36" Cupola: 36" x 36" x 48"

Weight: 115 lbs

48" Cupola: 48" x 48" x 61"

Weight: 153 lbs

Height measured from roof peak to cupola roof peak.